



Custom Office Beverage
Service Since 1974

Bunn/Newco Brewers Maintenance Procedures

www.coffee-mill.com

CAUTION – HOT SURFACES AND HOT WATER

If your brewer is running slowly, please try the following steps:

1. To get water flow back to normal, remove the spray head (located above the brew basket), use a paperclip and push any debris out of the holes in the spray head, and then rinse thoroughly.
2. Clean out the water line from the holding tank to the spray head. Remove the de-liming spring and insert it into the water line pushing upwards until the spring is inserted nearly all the way. If the spring meets resistance, keep turning it while pushing upwards will usually move it past the obstruction/debris.
3. Once you have inserted the spring all the way, move it back and forth to remove any build up in the brewer.
4. With the spray head off, run a pot of water through the brewer to finish cleaning out the water line.
5. Replace the spray head and you are now ready to resume brewing coffee.

For questions or service, please contact us anytime!

Phone: 763-391-7997

Email: info@coffee-mill.com

Revised 09/08